


# Satlook


## MICRO+

**New function!**

Easy to use Sat-ID for Astra 19° & 28°, Eutelsat/Hotbird and Hellas, all preprogrammed for faster installations!

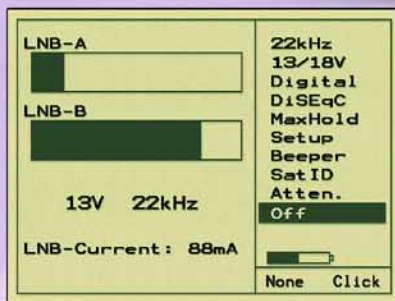

LNB level

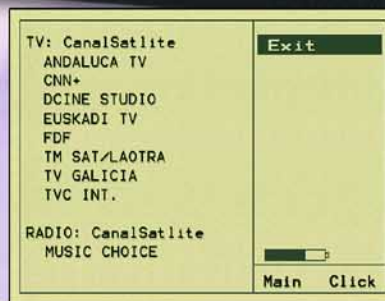

Channel info (NIT)



Sat identification

### SATLOOK MICRO measuring-instrument:

- ▶ Measure on two LNB's at the same time (920-2150 MHz).
- ▶ Very sensitive, easy to maximize weak and strong signals.
- ▶ Readout of NIT –gives Satellite-ID and TV/Radio-channel info.
- ▶ Digital BER and S/N-ratio and constellation diagram (QPSK).
- ▶ Stores up to 99 memory positions (for satellite transponders).
- ▶ Scan through memory positions (transponders) for easy Sat-ID.
- ▶ LNB voltage 13/18v. 22 kHz tone switch.
- ▶ Standard DiSEqC according to level (1.0, 1.1, 1.2).
- ▶ 3" LCD with very high resolution.
- ▶ RS232 for PC-connection and future upgrades.
- ▶ Built in, rechargeable battery.
- ▶ Only 2 kg complete with carrying-case.



# SATLOOK MICRO

The instrument for the professional installer!

The SATLOOK MICRO is a swedish made SAT-TV instrument. The unit is made for exact alignment and adjustment of satellite-dishes.

It is intended for professional use when high accuracy and precise information are needed.

It's easily operated without a lot of unnecessary buttons and knobs. The basic functions are easy to get a hold on and takes only minutes to learn.

The instrument is provided with a 3" LCD which either shows Sat-signal strength or Digital information.

The SATLOOK Micro is unique as it can measure satellite signal from two LNBS at the same time. Signal strength is presented graphical on the LCD-display in form of thermometer-scales. It can present pitchtones (the higher tone the better signal) on a loudspeaker.

SATLOOK Micro also show Digital information like BER (bit error rate), constellation-diagram (QPSK) and S/N (signal/noise ratio).

**The NIT function can identify the various TV-satellites by reading out the NIT in the Bitstream (NIT = Network Information Table). The NIT also contains info about the transponders TV and Radio-channels.**

SATLOOK Micro can store up to 99 positions of Satellite transponder information. The instrument can easily scan through the memory positions and identify the various Satellite transponders-

The polarisation of the LNB is switchable 13V/18V and the Hi-Lo band with 22 kHz-tone. The DiSEqC-function controls all DiSEqC-accessories (like switches, LNB's and actuators). The power of the instrument is supplied by a built in and rechargeable battery. Even though the instrument has a lot of functions it is still very light and flexible.

## Technical specification.

<b>Input frequency:</b>	920-2150MHz.
<b>Sat-TV min level in:</b>	About 35 dBuV (noise).
<b>Sat-TV max level in:</b>	About 100 dBuV.
<b>Input/output impedance:</b>	75 Ohm, F-connectors.
<b>Measuring method (analog):</b>	Signal presentation on LCD display in form of thermometer scales. Pitch-tone, highest tone on loudspeaker.
<b>Measuring method (Digital):</b>	BER (bit error rate) S/N (signal/noise-ratio) Constellation (QPSK)
<b>Max-level:</b>	Thermometer scales showing max. Maxhold function. BER, S/N and QPSK showing max.
<b>Satellite-identification:</b>	Yes, by reading out the NIT in the bitstream. Info about the TV and Radio channels.
<b>Memory:</b>	Up to 99 transponders can be stored with name.
<b>Memory locks on:</b>	FEC, Symbol-rate Frequency, 13/18V, 22kHz.
<b>Memory search:</b>	The instrument scans the memory positions and presents the matching transponders.
<b>Presentation:</b>	On LCD 3"
<b>PC-connection:</b>	Yes, RS232-output
<b>Power out:</b>	Yes, 13-18V
<b>22 kHz tone:</b>	Yes, on/off.
<b>DiSEqC:</b>	Yes, all 1.0 and 1.1. Also Toneburst on/off.
<b>DiSEqC actuator:</b>	Built in positioner for DiSEqC 1.2, SatScan and SatSelect.
<b>Battery:</b>	Rechargeable 12v, 3.5 amp/hour.
<b>Operational:</b>	About 1 hour on a fully charged Battery.
<b>Weight:</b>	About 2 kg incl.battery.
<b>Accessories:</b>	Nylon carrying-case. Power-supply of 220v/13.5v,1.7amp. Car-charger. BNC/F-adapter.

## EMITOR AB

Sj viksbacken 14  
SE-117 43 Stockholm, Sweden  
Phone: +46 (0)8 775 00 01  
Fax: +46 (0)8 775 00 06  
[www.emitor.se](http://www.emitor.se)

**Distributor:**